

BOAT TRAILER MAINTENANCE GUIDELINES

To maximize the lifespan of your investment, it is recommended to follow these maintenance guidelines:

- To prevent rust, rinse the trailer's frame and components with fresh water after each use and store it in a way that minimizes exposure to salt spray whenever possible.
- Grease bearing buddies for tapered bearings regularly, at least at the start of each season, with yearly inspections advised for all bearings.
- During storage, jack the wheels off the ground and rotate them regularly to keep bearings lubricated.
- Regularly lubricate winch couplings and any other moving parts.
- For trailers fitted with brakes, ensure they are serviced regularly, avoid parking with the brakes engaged, wash the calipers, springs, and hubs, and use the trailer regularly.

For any problems call us free on 0800 162 500